Assembly and User Manual



 


This module can be installed by one person

The necessary tools required for assembly of this module



1







14x 16x
Spare Parts \rightarrow 2x
2x

